



**VIDEO WALL VIDEO
PROCESSORS MULTIVIEWERS
DIGITAL SIGNAGE EXTENDERS
CONTROL CENTERS SCALERS
WIRELESS**

IP GUIDE FOR THE DVI-SPLITPRO-2X



ABOUT THIS DOCUMENT

This document specifies how to configure the DVI-SPLITPRO-2X with TCP/IP settings to remotely use on the specified LAN network.

Software Version **v1.8**
Firmware Version **v1.10**

The firmware and software versions listed in this document have been tested within the expected environment the units can support and are fully supported by Avenview.

It is recommended that users read this entire document before attempting the both setup and firmware and fully understand all the steps and procedures outlined in this document.

This document was last updated 12/01/2015

- Report any bug issues to:- support@avenview.com



WARNING –Please ensure when using this guide for an existing setup please have available the following items:

DVI-SPLITPRO-2X with 12V 5A
USB to RS232 cable or COM cable
Ethernet (RJ45 Patch Cable 6 to 10ft)

GENERAL INSTRUCTIONS

1. Before you begin the setup guide or firmware upgrade ensure the DVI-SPLITPRO-2X unit is powered by the supplied power supply 12V 5A.
2. PC Requirements-Windows® XP/Windows Vista®/Windows® 7/Windows® 8/Windows® 10
3. Ensure your Laptop or desktop is plugged in to AC power during the update process. It is not recommended to use only battery power during the setup/upgrade. Do not remove power from the unit at any time during the firmware update process as this could lead to incomplete results.


USA Head Office: Office Avenview, Corp. 275 Woodward Avenue, Kenmore, NY 14217
Phone: +1.716.218.4100 ext223 Fax: +1.866.387-8764
info@avenview.com

Canada Sales: Avenview, 151 Esna Park Drive, Unit 11 & 12 Markham, Ontario, L3R 3B1
Phone: 1.905.907.0525 Fax: 1.866.387.8764
www.avenview.com



IP CONFIGURATION STEPS

1. Download the control software from the Avenview website>DVI-SPLITPRO-2X>SOFTWARE
DVI-SPLITPRO-2X Download Link: www.avenview.com/imgs/DVI-SPLITPRO-2X.exe
or from the CD supplied with the unit.
2. Install the new Control Software double dual viewer.exe v1.8
3. Complete the install wizard. When the install is complete; Click on the icon on the desktop.
4. This will launch the new Avenview Control Software. It will open the main control window.
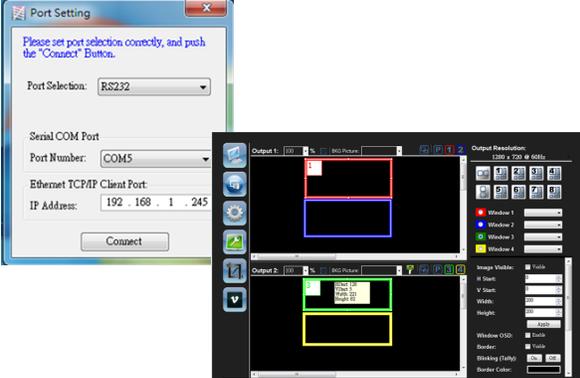
<p>Setup Gu</p> <ol style="list-style-type: none"> 1. Before you begin setup, please ensure you have the parts listed. 2. Please ensure your PC/Laptop has the ability to install USB to RS232 drivers 3. Please download the drivers or acquire it from the CD supplied. 	<p>Parts listed required</p> <p>DVI-SPLITPRO-2X with 12V 5A COM cable USB to RS-232 cable (Prolific recommended) Network cable CAT5/6 patch cable PC/Laptop with network and USB ports</p>
<ol style="list-style-type: none"> 4. Once all above is completed connect your Windows Laptop with USB and the RS232 to the device DVI-SPLITPRO-2X 5. Connect the COM cable to your PC or Laptop via the USB to RS-232 6. Also connect your PC/Laptop to DVI-SPLITPRO-2X with ethernet patch cable or switch via network 	
<p>Softwareware</p>  <ol style="list-style-type: none"> 7. Please start the Double Dual Viewer software from the icon. 8. After its launched please select RS232 and on the COM port the device manager on PC specifies 9. The Software Main window will appear This verifies that you are connected. 	




Control Software

19. Close all software applications and restart with the units control software.



Please start the Double Dual Viewer software from the icon. When the Port setting window Pops up choose TCP/IP

20. Please ensure the IP address shown is the same as you configured in "Tools".

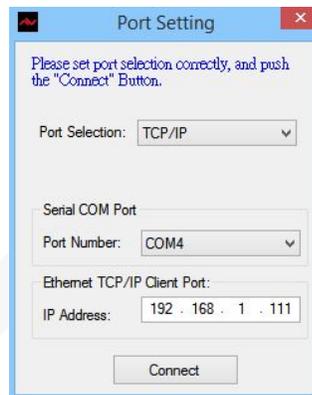

DVI-SPLITPRO-2X
 ADVANCED DUAL SCREEN MULTIVIEWER WITH ROTATION AND CHROMAKEY



Thank You

